

Connect the cylinder, regulator, and manifold

- (1) Close the cylinder hand valve all the way, and connect the regulator (b) to the cylinder (a): thread the regulator nut onto the cylinder valve, and tighten enough to seal. Do not over-tighten.
- (2) Attach a barbed swivel to the output of the regulator and tighten. Do not over-tighten.
- (3) Soften the ends of the 3' length of 5/16" gas tubing by immersing the ends in warm water for several minutes.
- Slide two hose clamps onto the 3' length of 5/16" gas tubing. Push one end of the tubing onto the end of the barb swivel on the regulator. Push the other end onto the barbed end of the manifold (c)
- Tighten one hose clamp around the tubing and barb on each end- enough to seal but not enough to tear or cut the tubing.

Assemble and connect the gas lines

- 5 Soften the ends of two 4' lengths of 5/16" gas tubing by immersing the ends in warm water for several minutes.
- (6) Slide two hose clamps onto each 4" length of 5/16" gas tubing. Push one tube onto each of the manifold (c) barbs. Push the opposite end of each tube onto a barbed swivel.
- Tighten hose clamps around each barb and around each barbed swivel enough to seal but not enough to tear or cut the tubing.
- 7 Screw each barbed swivel with line onto one of the gray gas disconnects (d) (included in our kit).
- (8) Connect the gray disconnects to the keg (f) gas posts. The gas posts have a groove/notch at the bottom of the post for identification. Lift up on the disconnect ring, push onto post, and release ring.

Assemble and connect the liquid lines

- 9 Soften the ends of two 5' lengths of 3/16" liquid tubing by immersing the ends in warm water for several minutes.
- (10) Slide four hose clamps onto each 5' length of 3/16" liquid tubing. Push one end of the tubing onto each of the black liquid disconnects (e). Push a picnic faucet into the other end of each tube.
- Tighten hose clamps around picnic faucet tube and barb connection and tube and barb connection to disconnect enough to seal but not enough to tear or cut the tubing.
- (11) Connect the black disconnects to the keg (f) liquid posts. Lift up on the disconnect ring, push onto post, and release ring.
- Open the cylinder valve, adjust your regulator, open the manifold valve(s) to the keg(s), and you're ready to pour!