



● **Connect the cylinder and regulator**

- ① Close the cylinder hand valve all the way, and connect the regulator (b) to the cylinder (a): thread the regulator nut onto the cylinder valve, and tighten enough to seal. Do not over-tighten.
- ② Attach a barbed swivel to the output of the regulator and tighten. Do not over-tighten.

● **Assemble and connect the gas line**

- ③ Soften the ends of the 4' length of 5/16" gas tubing by immersing the ends in warm water for several minutes.
- ④ Slide two hose clamps onto the 4' length of 5/16" gas tubing.
- ⑤ Attach one end of the tubing to the gas disconnect (c) - gray for ball lock kegs, gray collar with two slots for pin lock kegs - and tighten the clamp. Do not over-tighten. For threaded disconnects, attach a barb swivel to the end of the tubing first and tighten clamp around connection to tubing.
- ⑥ Push the other end of the tubing onto the end of the barb swivel on the regulator.

**T** Tighten one hose clamp around each barb - enough to seal but not enough to tear or cut the tubing.

- ⑦ Connect the gas disconnect to the keg (e) gas post.  
**For ball lock kegs:** The gas post has a groove/notch at the bottom of the post for identification. Lift up on the disconnect ring, push onto post, and release ring.  
**For pin lock kegs:** The gas post has two pins. Align the collar with the pins and turn down towards keg until locked.

● **Assemble and connect the liquid lines**

- ⑧ Soften the ends of the 5' length of 3/16" liquid tubing by immersing the ends in warm water for several minutes.
- ⑨ Slide two hose clamps onto the 5' length of 3/16" liquid tubing. Push one end of the tubing onto the barb of the liquid disconnect (d).
- ⑩ Push the picnic faucet into the other end of the line.

**T** Tighten hose clamps around picnic faucet connection and around barbed connection to disconnect - enough to seal but not enough to tear or cut the tubing.

- ⑪ Connect the black disconnect to the keg (e) liquid post. Lift up on the disconnect ring, push onto post, and release ring.  
**For ball lock kegs:** The liquid post has no groove/notch at the bottom of the post. Lift up on the disconnect ring, push onto post, and release ring.  
**For pin lock kegs:** The liquid post has three pins. Align the collar with the pins and turn down towards keg until locked.

- 😊 Open the cylinder valve, adjust your regulator, and you're ready to pour!